



MORTISE TEMPLATE

HEAVY DUTY MORTISE LOCK

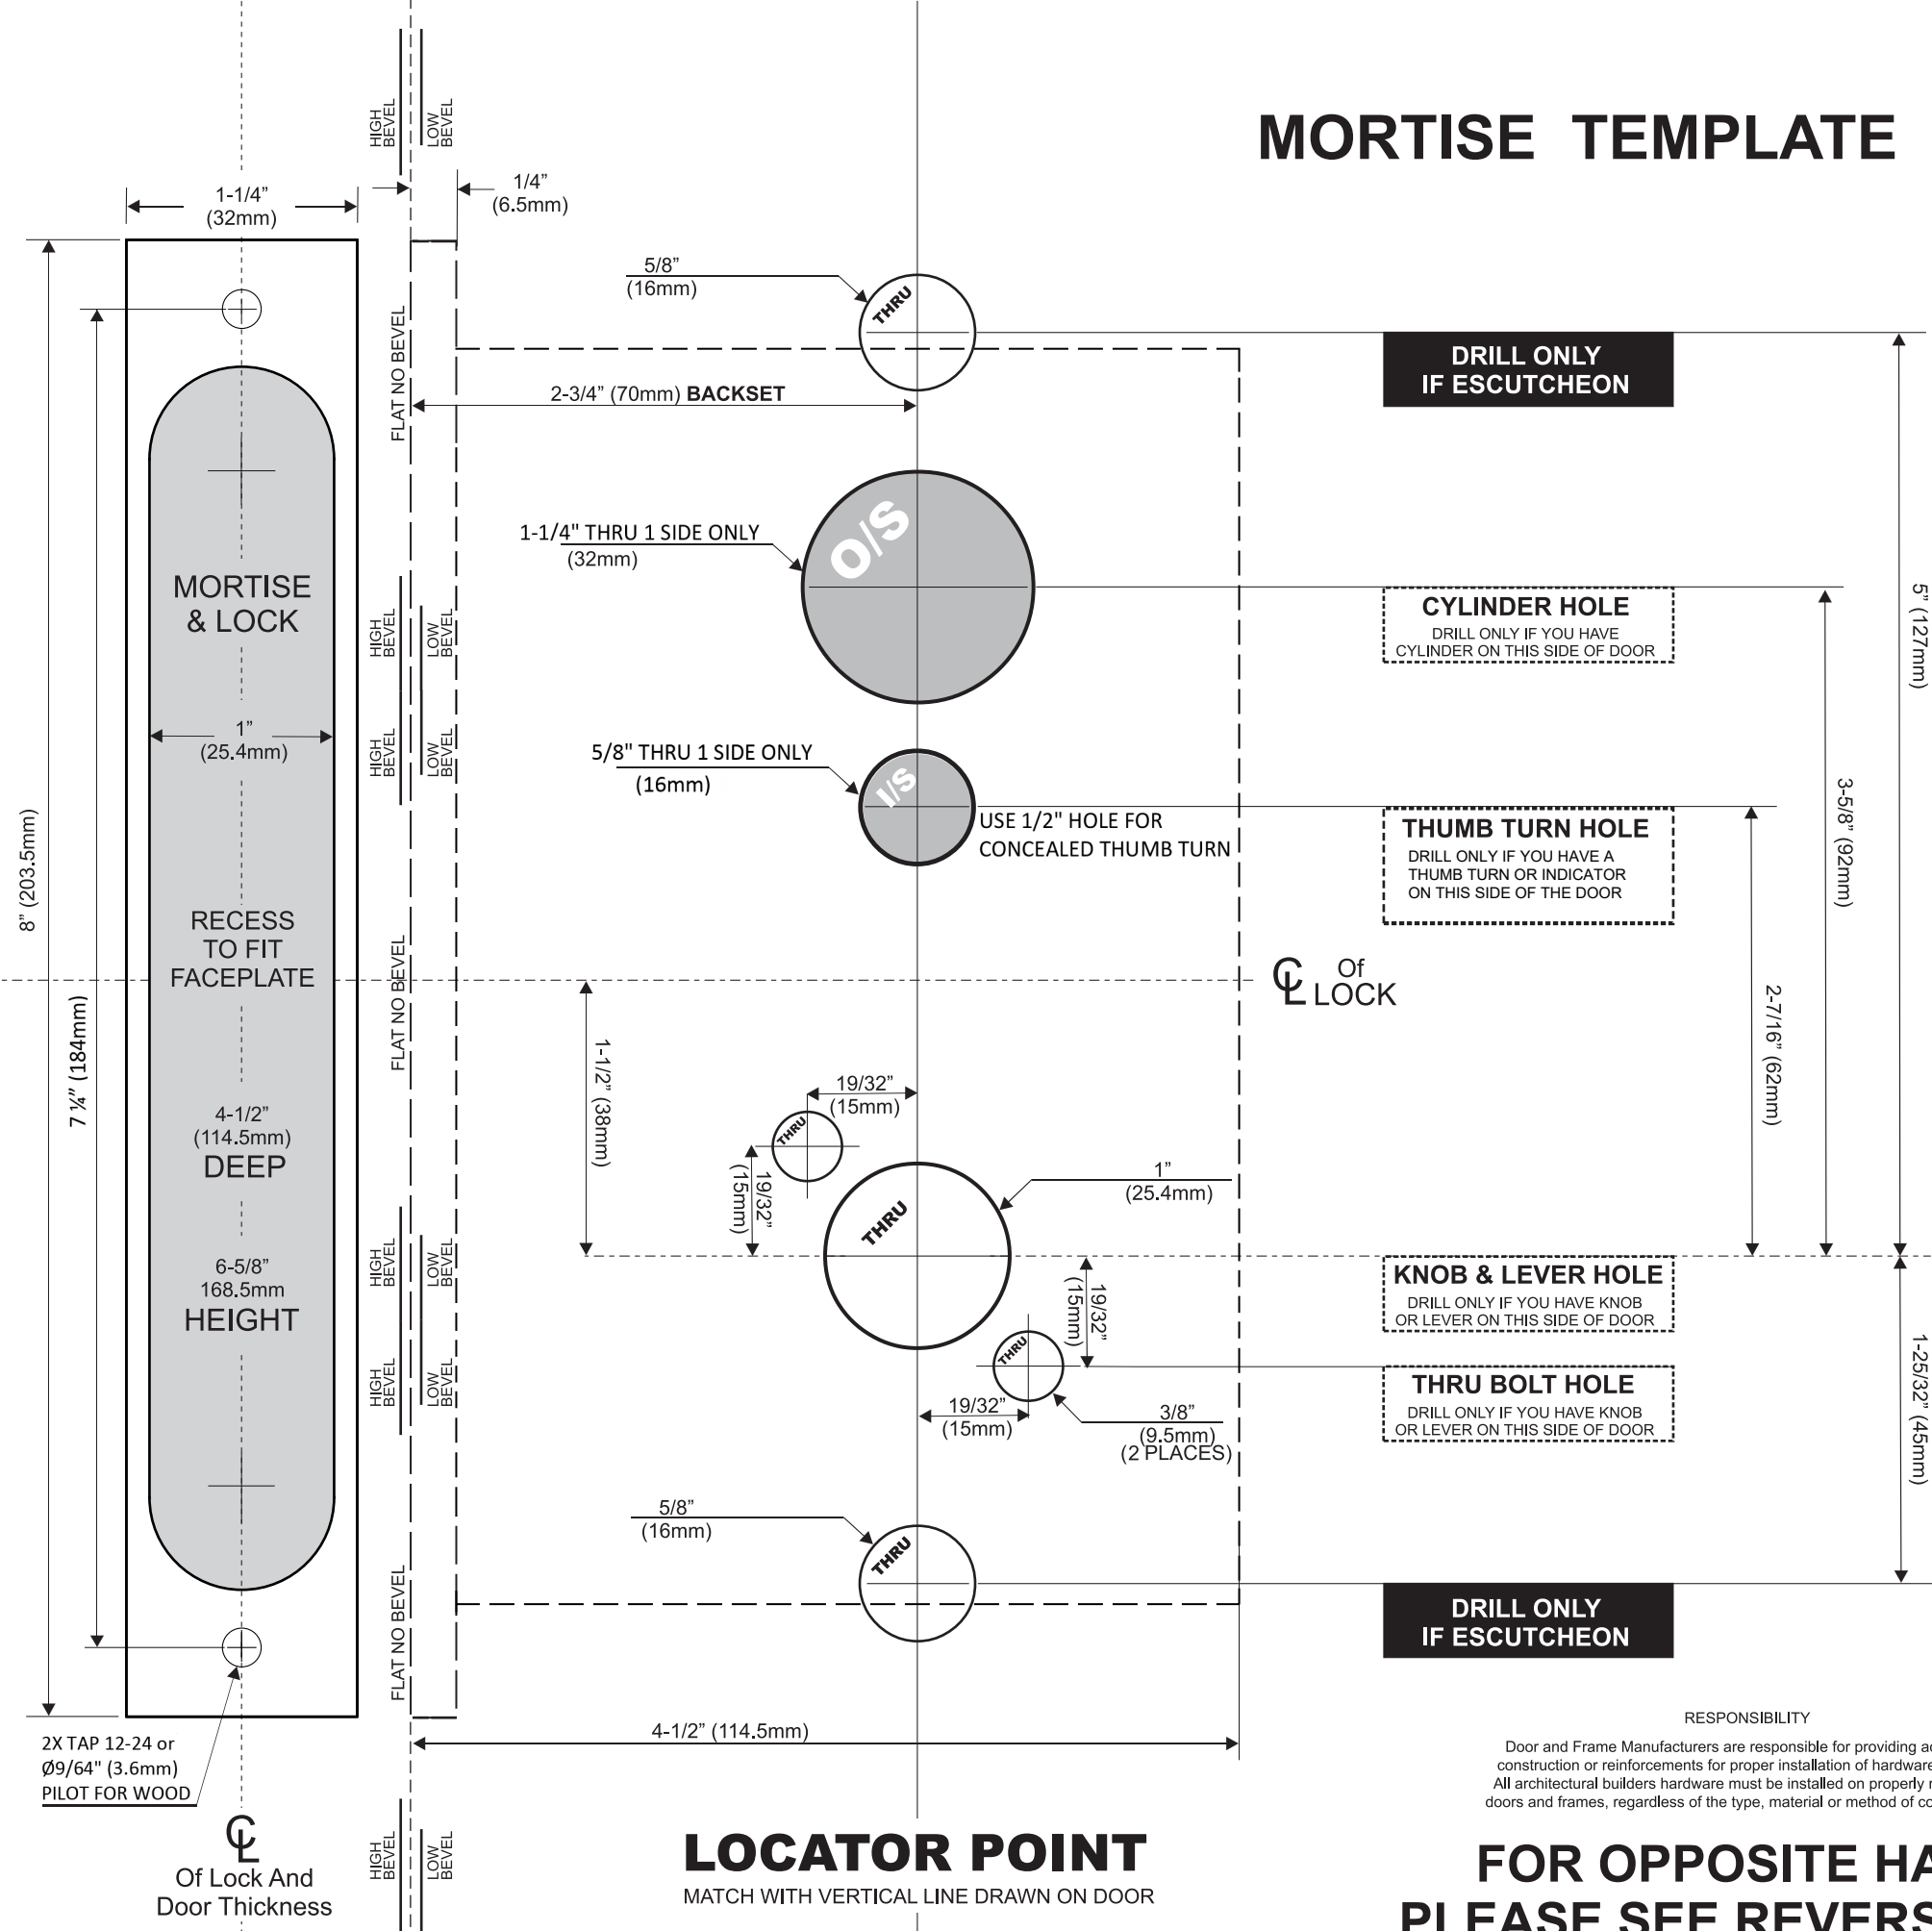

REGULAR

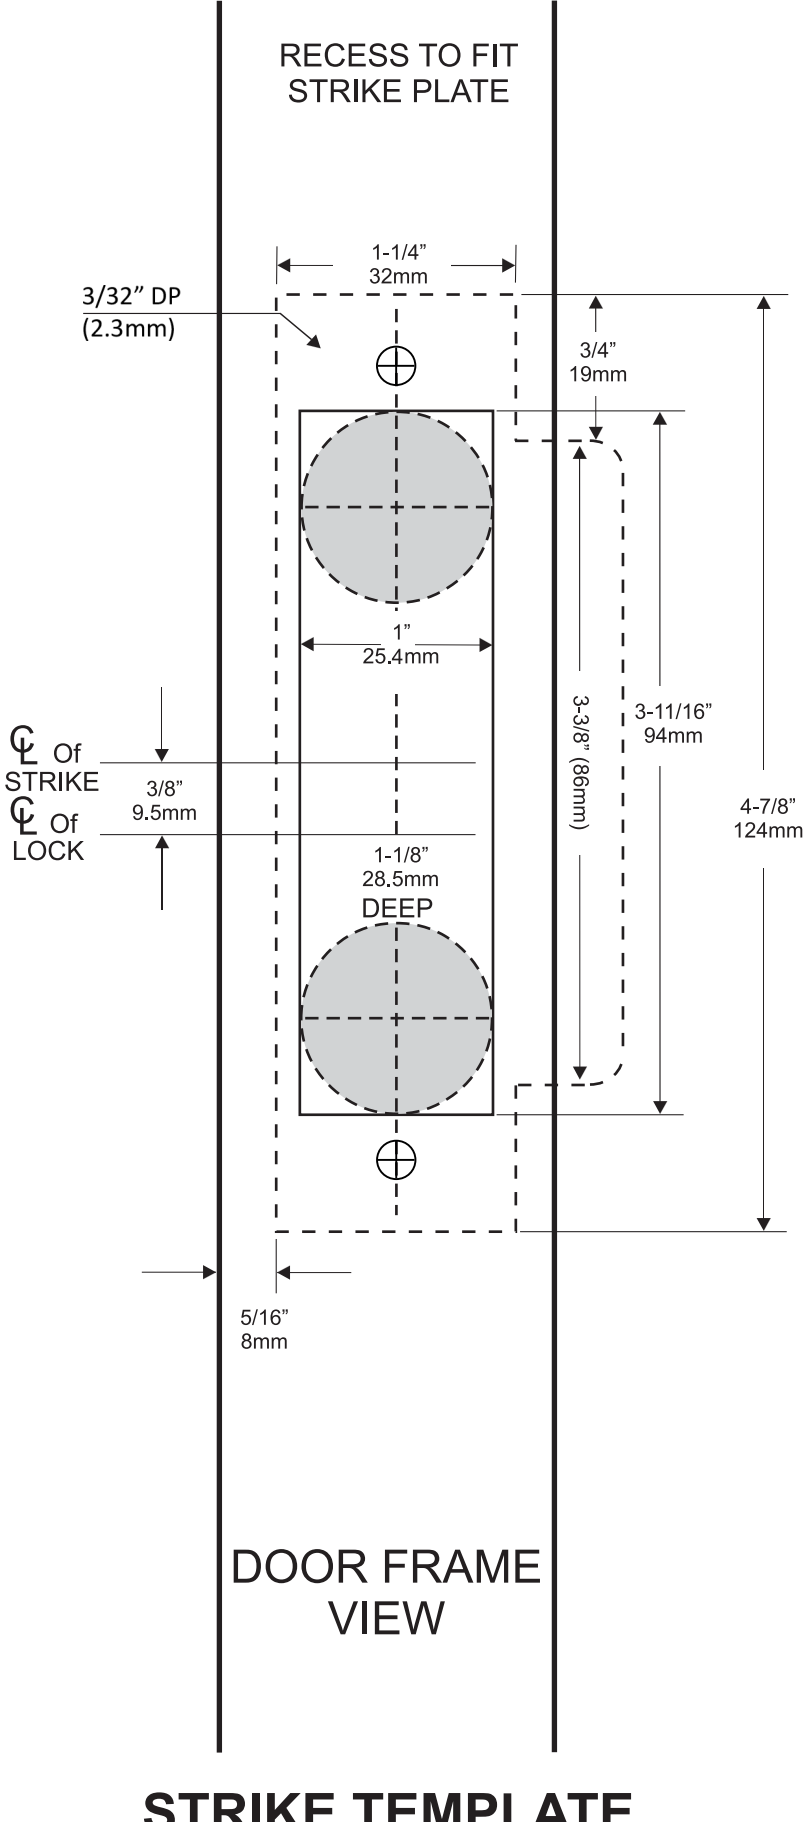

RESPONSIBILITY
Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material or method of construction.


FOR OPPOSITE HAND, PLEASE SEE REVERSE SIDE

LOCK FUNCTION	OUTSIDE				INSIDE		
	Lever Hole	Cylinder Hole	Thumb Turn Hole	Lever Hole	Cylinder Hole	Thumb Turn Hole	
01	●	●	●	●	●	●	
04 / 05 / 06 / 07	●	●	●	●	●	●	
08 / 12 / 13 / 15 / 20 / 21 / 26	●	●	●	●	●	●	
09 / 11 / 14 / 30 / 32 / 34 / 35 / 82	●	●	●	●	●	●	
2 / 19 / 22	●	●	●	●	●	●	
18	●	●	●	●	●	●	
17 / 29	●	●	●	●	●	●	
16	●	●	●	●	●	●	
ADD THIS HOLE ON SIDE W INDICATOR	●	●	●	●	●	●	

DOOR PREPARATION CHART

LOCK POSITION
HEAVY DUTY MORTISE

WITH INDICATOR ADD THIS HOLE
WITH INDICATOR ADD THIS HOLE

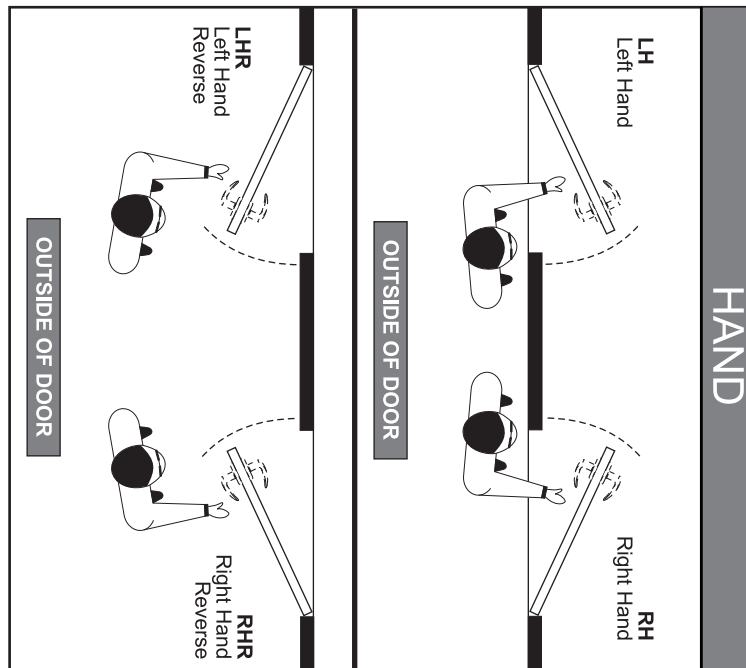

MORTISE TEMPLATE

